



Includes:

- Important Safety Information
- Operating Instructions
- Maintenance and Storage

MULE™ 3010 TRANS4x4 Diesel Utility Vehicle

Read this manual carefully. It contains safety information.

OWNER'S MANUAL

EXHIBIT

G

tabbies

HOW TO OPERATE 61


Parking the Mule

- Stop the vehicle on a level surface.

CAUTION

Avoid parking on steeply inclined surfaces.

- When the engine has stopped, apply the parking brake to help prevent the vehicle from rolling.

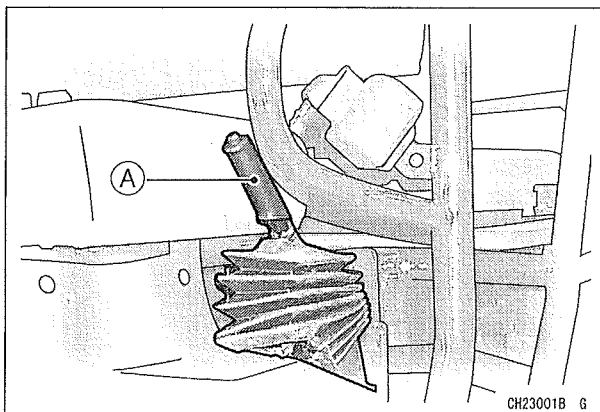

A. Parking Brake Lever

⚠ WARNING

Be sure to apply the parking brake before leaving the vehicle. If the vehicle should move, it might be damaged or cause injury.

- Remove the main switch key to prevent unauthorized use.
- When parking inside a garage or other structure, be sure the structure is well ventilated and the vehicle is not close to any source of flame or sparks. This includes any appliance with a pilot light.

⚠ WARNING

Diesel fuel is extremely flammable and can be explosive under certain conditions.